


Communicating Furnace With Single Stage Non-Communicating A/C

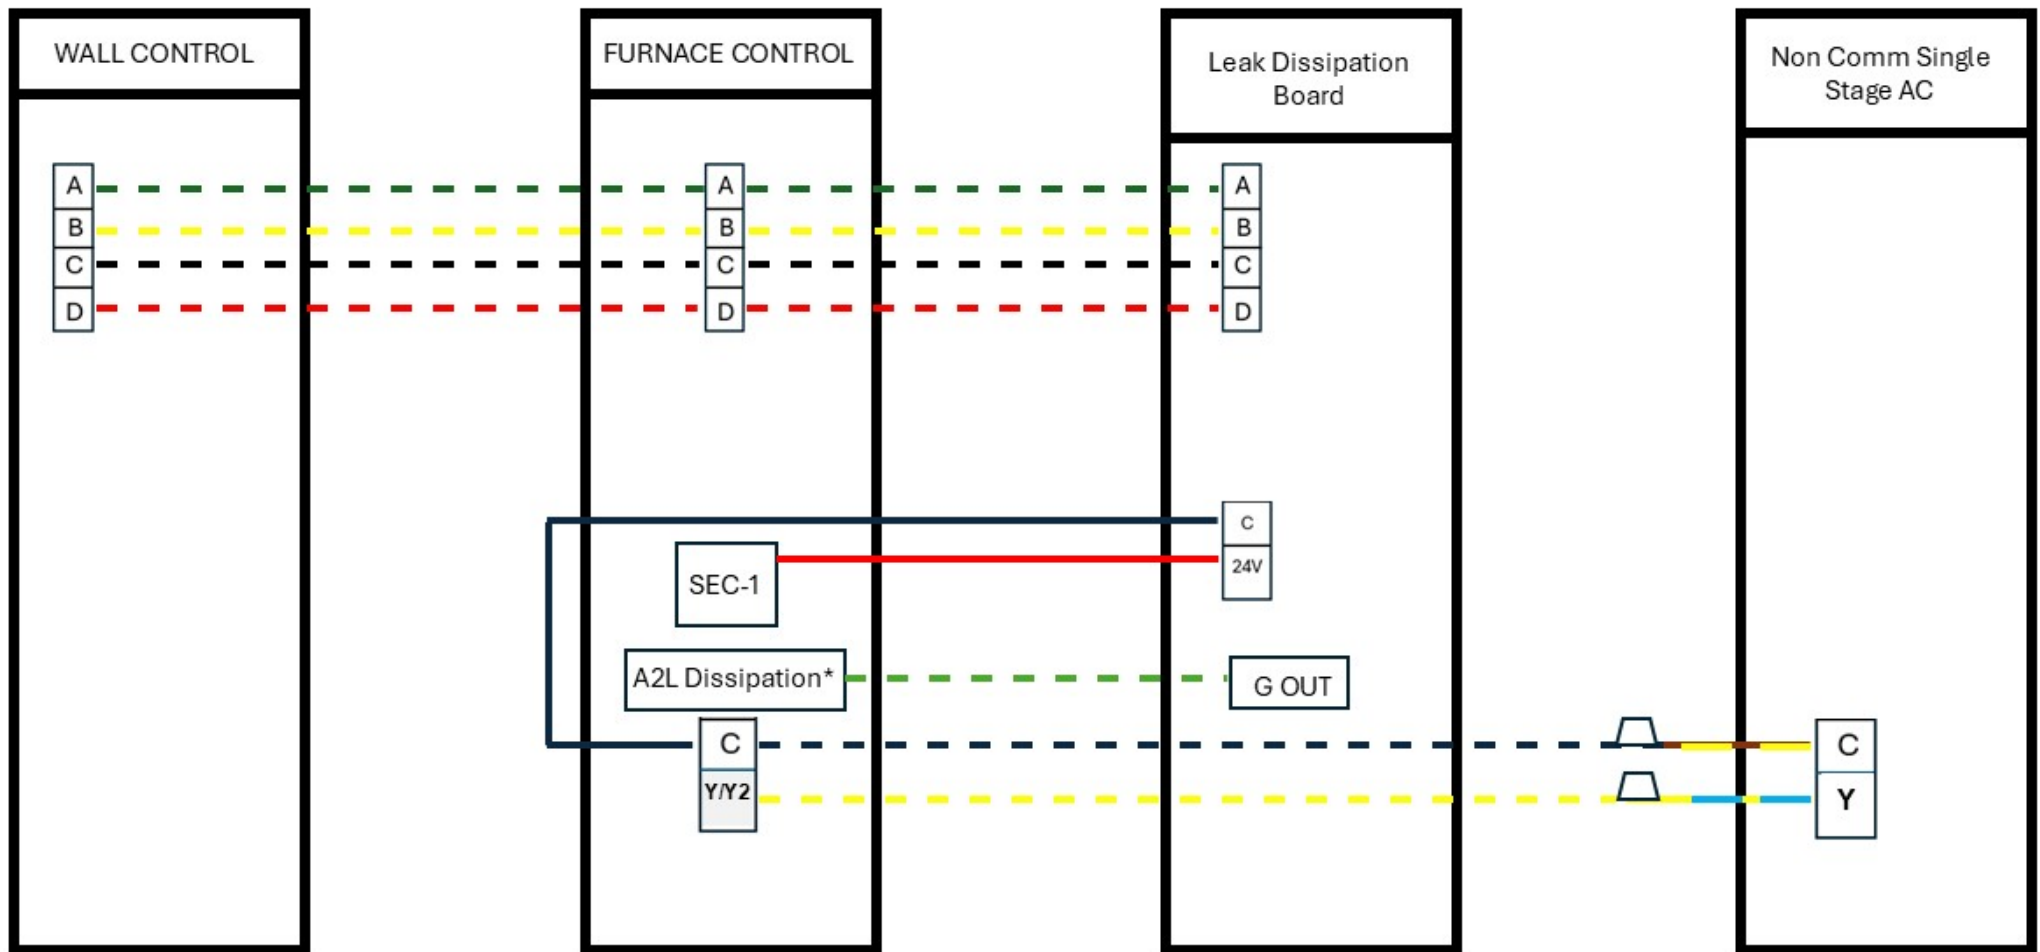

All other wires in dissipation harness that are not used must have wire nuts installed on the bare ends.

**** When available on furnace control***